
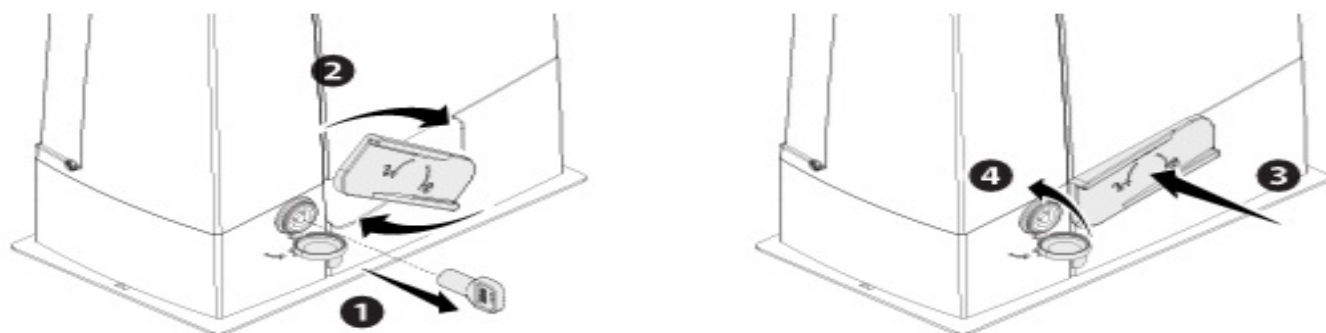


CAME BXV MANUAL RELEASE INSTRUCTIONS

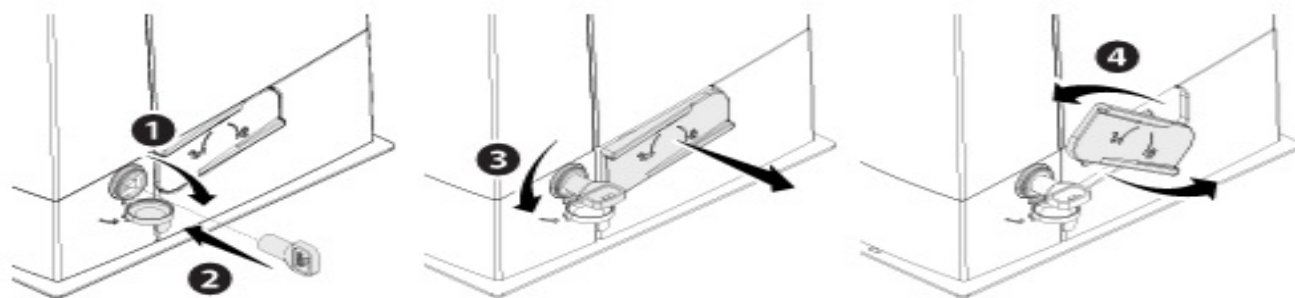

.Insert key and push and turn clockwise
.lever will pop out,
.turn lever anti clock wise 3 turns -
.gate is now manual and can be pushed
open/closed
.to lock motor turn lever 2 turns clockwise
and push lever back into slot to lock