


BARRIER Unlock instructions

Warning: always disconnect the installation from mains electricity and, if applicable, from the batteries before unlocking and locking the automation system.

In the event of a blackout, malfunction or ordinary and extraordinary maintenance, the barrier must be unlocked. The unlocking operation must be carried out with the rod in the closed position.

Make sure that people, things or animals are not within range of the barrier during the unlocking operation.

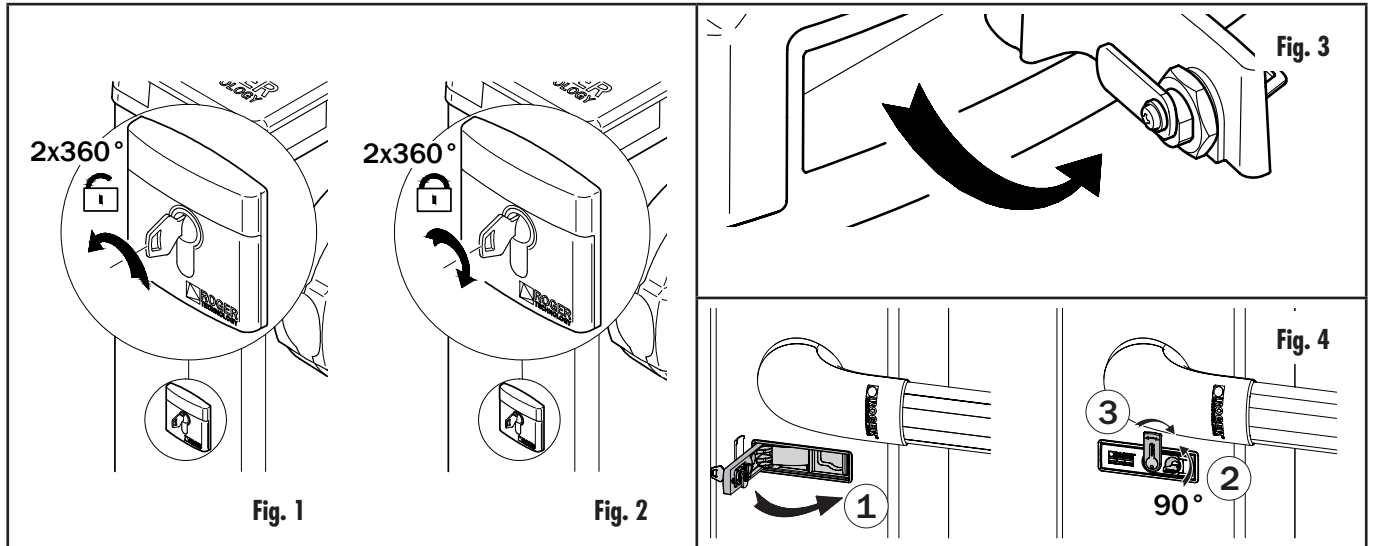

TO UNLOCK

AGILIK: Insert the supplied key and turn it 360° anti-clockwise twice (fig. 1).

Move the rod manually.

BIONIK: Open the lock cover flap (fig. 3 rif. 1).

Insert and turn the supplied key 90° clockwise (fig. 3 rif. 2).

Open the release door completely (fig. 3 rif. 3).

Move the rod by hand.

TO LOCK

AGILIK: To relocate the barrier, turn the key 360° clockwise twice (fig. 2). Remove the key.

BIONIK: To relock the barrier, close the release door by turning the key 90° clockwise, paying attention to your fingers.

With the door closed (fig. 4 rif. 1), turn the key 90° counterclockwise (fig. 4 rif. 2).

Remove the key and close the lock cover (fig. 4 rif. 3).