

SWING Unlock instructions

Warning: always disconnect the installation from mains electricity and, if applicable, from the batteries before unlocking and locking the automation system.

BE20 - BR20 - R20 Series

UNLOCKING (fig. 1)


Open the lock cover (ref. 1), insert the key included in the lock and turn clockwise by 90° (ref. 2), then pull the key first and then the lever to open the door (ref. 3) completely. Manoeuvre the gate manually.

LOCKING (fig. 2)

WARNING: operate the lock release lever with caution to avoid the risk of injury to the fingers.

Close the lock release lever. Insert the key included into the lock and turn clockwise by 90°.

Once the lock release lever has returned to its original position, turn the key anticlockwise, remove from the lock and close the lock cover.

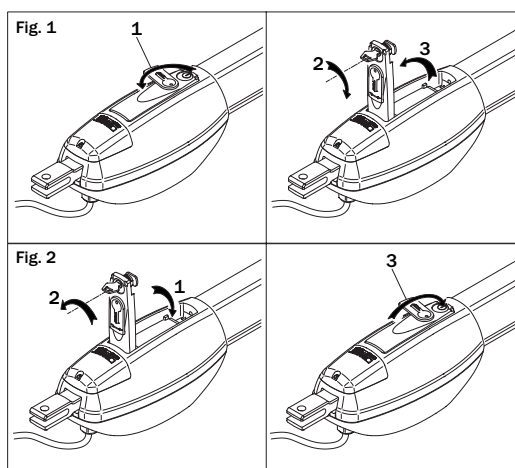

BM20 - M20 - H20 - SMARTY Series

UNLOCKING (fig. 1)


Turn the lock cover (rif. 1), insert the key included in the lock and turn clockwise by 90° (ref. 2), then pull the key first and then the lever to open the door (ref. 3) completely. Manoeuvre the gate manually.

LOCKING (fig. 2)

WARNING: operate the lock release lever with caution to avoid the risk of injury to the fingers.

Close the lock release lever. Insert the key included into the lock and turn clockwise by 90°.

Once the lock release lever has returned to its original position, turn the key anticlockwise, remove from the lock and close the lock cover.

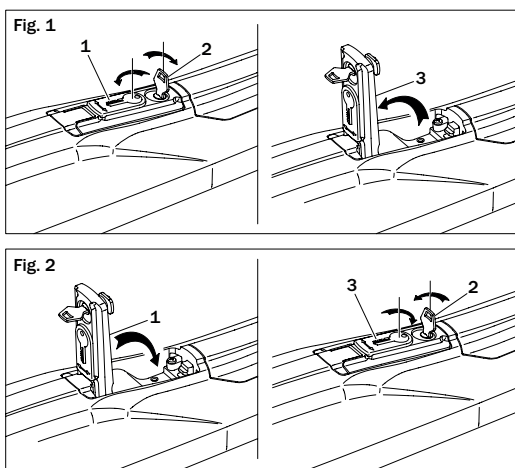

BH23 - H23 Series

UNLOCKING (fig. 1)


Turn the lock cover (rif. 1), insert the key included in the lock and turn clockwise by 90° (ref. 2), then pull the key first and then the lever to open the door (ref. 3) completely. Manoeuvre the gate manually.

LOCKING (fig. 2)

WARNING: operate the lock release lever with caution to avoid the risk of injury to the fingers.

Close the lock release lever. Insert the key included into the lock and turn clockwise by 90°.

Once the lock release lever has returned to its original position, turn the key anticlockwise, remove from the lock and close the lock cover.

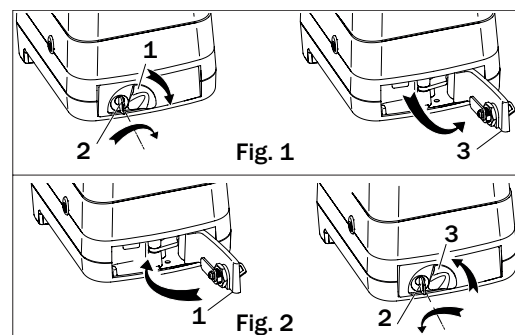

R23 Series


UNLOCKING (fig. 1)

Open the lock cover (ref. 1), insert the key included in the lock and turn clockwise by 90° (ref. 2). Turn the lever by 180° (ref. 3). Manoeuvre the gate manually.

LOCKING (fig. 2)

WARNING: operate the lock release lever with caution to avoid the risk of injury to the fingers.

Turn the lock release lever by 180° and return it to its original position. Insert the key and turn anticlockwise, remove from the lock and close the lock cover.

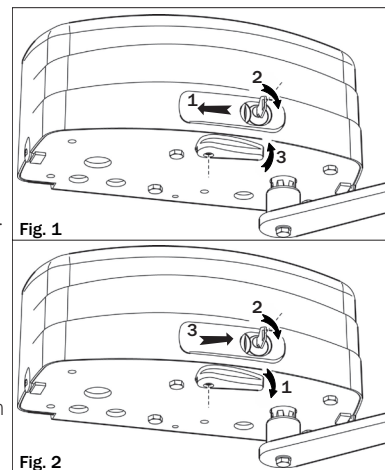

BR21 - R21 Series

UNLOCKING RL650 (fig. 1)

Remove the lock cover (ref. **1**), fit the lock release lever included and turn by approximately 120° towards the centre of the gate (ref. **2**). Manoeuvre the gate manually (ref. **3**).

LOCKING RL650 (fig. 2)

With the gate open, fit the lock release lever and rotate towards the gate hinges to return it to its original position. Fit the lock cover. The release system re-engages automatically when the gate is manoeuvred again.


UNLOCKING RL651

(Fig. 1) Remove the lock cover (ref. **1**), insert the lock release key included and turn by approximately 90° towards the centre of the gate (ref. **2**) without removing the key. Pull the lever to open completely (ref. **3**). Manoeuvre the gate manually (ref. **4**).


LOCKING RL651

(Fig. 2) With the gate open, turn the release lever (ref. **1**) to return it to its original position.


Turn the key by 90° towards the gate hinges (ref. **2**). Fit the lock cover (ref. **3**). The release system re-engages automatically when the gate is manoeuvred again.

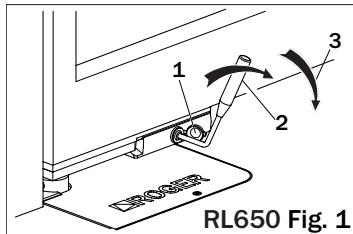


RL650 Fig. 1

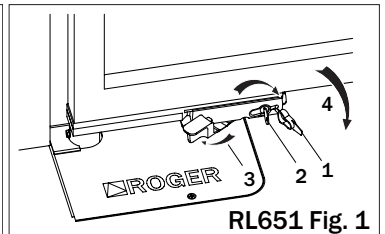

RL651 Fig. 1

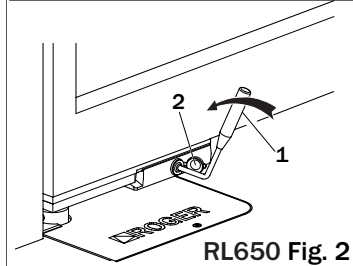

RL650 Fig. 2

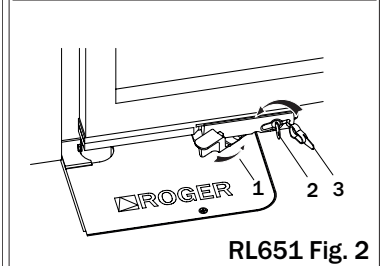

RL651 Fig. 2

H21 Series

UNLOCKING RL750 (fig. 1)

Remove the lock cover (ref. **1**), fit the lock release lever included and turn by approximately 120° towards the centre of the gate (ref. **2**). Manoeuvre the gate manually (ref. **3**).

LOCKING RL750 (fig. 2)

With the gate open, fit the lock release lever and rotate towards the gate hinges to return it to its original position. Fit the lock cover. The release system re-engages automatically when the gate is manoeuvred again.


UNLOCKING RL751

(Fig. 1) Remove the lock cover (ref. **1**), insert the lock release key included and turn by approximately 90° towards the centre of the gate (ref. **2**) without removing the key. Pull the lever to open completely (ref. **3**). Manoeuvre the gate manually (ref. **4**).


LOCKING RL751

(Fig. 2) With the gate open, turn the release lever (ref. **1**) to return it to its original position.


Turn the key by 90° towards the gate hinges (ref. **2**). Fit the lock cover (ref. **3**). The release system re-engages automatically when the gate is manoeuvred again.

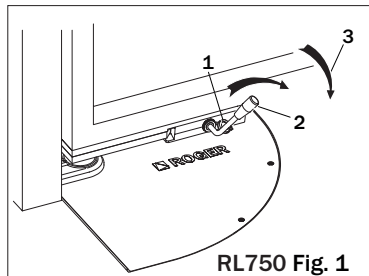


RL750 Fig. 1

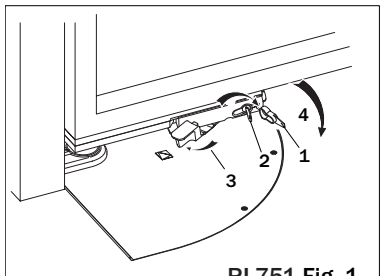

RL751 Fig. 1

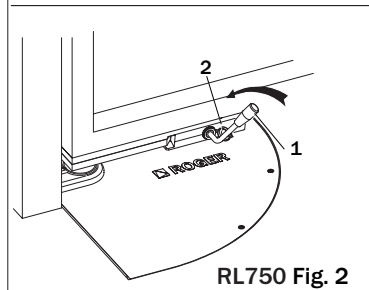

RL750 Fig. 2

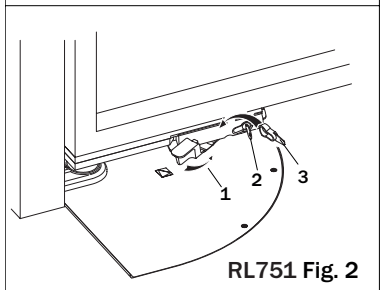

RL751 Fig. 2